

HOGUE[®] HOLSTERS



CARRY HOLSTER

IMPORTANT CONSUMER AND
WARRANTY INFORMATION ON
BACK OF PACKAGE

Hogue Holster User Guide

Read and understand all owner's manuals and instructions provided by the manufacturer of your handgun prior to holster usage.

- Improper or careless use of a firearm and/or holster may result in serious injury or death. It is the user's responsibility to have a thorough knowledge of all aspects of firearm and holster safety and use.
- Test the holster for proper fit with your firearm in an unloaded condition.
- If your firearm is equipped with a safety lever, be sure the safety is engaged when holstering the firearm.
- When drawing firearm from holster or replacing it in holster do not place finger near the trigger. Position trigger finger adjacent to but away from the trigger.
- While obtaining a shooting grip with trigger finger extended straight, press the lever release down with thumb to release stock. Draw firearm straight up. When re-holstering firearm, insert straight down.
- It is the user's responsibility to properly maintain holster regularly including checking screws and lever for proper function.

- Do not expose the holster to extreme heat conditions.



- Do not leave holster in trunk of vehicle during extremely hot weather.
- Never store your holster near a heat source. Avoid storing holster near space heaters, radiators, fireplaces or other heating sources that may emit high temperatures. Temperatures in excess of 200° may deform or damage the polymer from which Hogue Holsters are made.

IMPORTANT WEAR MAINTENANCE:

With continued use, particular firearm models with a serrated trigger guard may begin to wear down the holding bolt inside the holster. This is more prone to certain Sig Sauer and 1911 models. This is common wear but will require the user to monitor that area to ensure the firearm is being held securely. Inspect your holster regularly. With an empty holster, look inside holster and press release lever. Moving part is the holding bolt. Insert unloaded firearm and check bolt function. **Please contact Hogue for replacement information if your inspection reveals the holding bolt wearing down.**

HOGUE[®]

PO BOX 91360
HENDERSON, NV 89009
805-239-1440 • FAX 805-239-2553


HOGUEINC.COM

CRD-INS-HLSTCC-08172016

Belt Plate Installation

Your carry holster has been factory assembled with the hip paddle installed. To replace with belt plate: [1] Remove 3 screws (save screws.) [2] We recommend using belt plate spacer for installation with belt plate.

Place with notched area towards holster. [3] Use caution to not lose spacer washer. [4] Place belt plate onto holster aligning screw holes. [5] Insert screws using 2 long screws on top and 1 short screw on bottom. We recommend using thread lock compound on screws once you are satisfied with holster assembly.

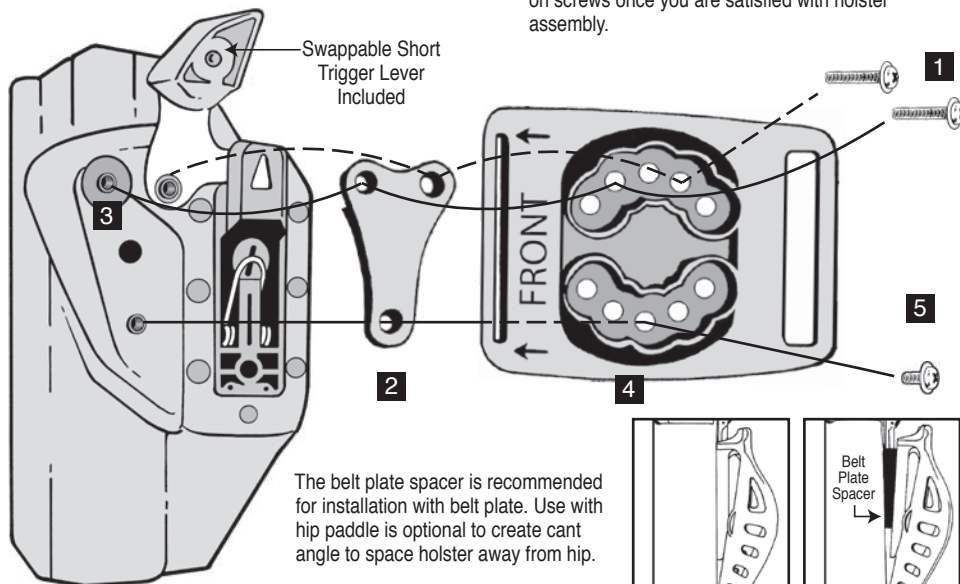

The belt plate spacer is recommended for installation with belt plate. Use with hip paddle is optional to create cant angle to space holster away from hip.


Holster Tension

Using supplied wrench, turn tension screw on front of holster clockwise to tighten or counter clockwise to relieve tension on the firearm. Tension should be set to eliminate any movement in the muzzle area. Do not over-tighten as it may affect the smooth draw ability.



Belt Plate Spacers

The belt plate was designed to accommodate belts from .5" - 2" wide. Use the spacers provided to reduce the belt loop openings to comfortably fit desired belt width. Spacers simply snap into place.

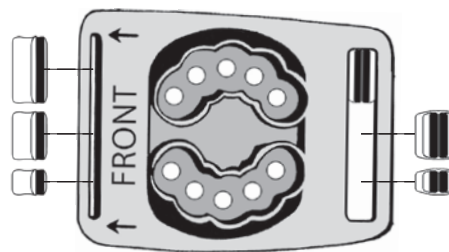

Maintenance

The holster requires minimal maintenance dependent upon level of usage. It is the user's responsibility to inspect the holster for signs of excessive wear, or loss of retention of the handgun, and to tighten all screws and hardware. We recommend a thread lock compound once you have determined your holster mounting and tension preferences.

If the holster begins to feel sticky, use a lubricant or silicon spray onto the retention mechanism [1] and on the handle lever pivot [2].

