


## Installation Instructions for Hogue® AR Trigger Guard

**If a trigger guard is currently installed:** Drive the roll pin out of the back of the trigger guard with a correct sized roll pin punch while supporting the opposite side of the pin hole. Then push the front pin into the trigger guard and remove the trigger guard.

**To install the new trigger guard:** 1) Depress the pin and 2) install into the front of the trigger guard. 3) Line up the rear holes and 4) support the opposite side of the receiver. 5) Drive the roll pin through the receiver and the trigger guard with a roll pin punch. *Make sure the bottom flange is supported and that the trigger guard is supporting the top flange otherwise you risk bending or breaking off one of the flanges.*

## Installation Instructions for Hogue® AR Trigger Guard

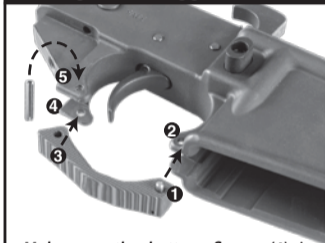

*Make sure the bottom flange (4) is supported and that the trigger guard is supporting the top flange (5) otherwise you risk bending or breaking off one of the flanges.*