
HOGUE

HOGUE[®] INC. P.O. BOX 91360 HENDERSON, NV 89009 1-800-438-4747 Hoqueinc.com


HANDALL[®] Jr. INSTALLATION PROCEDURE

1. Before starting work, make sure **the firearm is unloaded** and made safe with magazine removed.

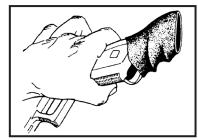

2. Begin by holding the firearm as shown. At the rearmost corner, cover the frame with the HANDALL Jr. Make sure it is right side up. Look for the (up[↑]) inside the grip.


Note: You may want to warm the HANDALL Jr. if the environment is cold for ease of installation. This can be done in hot or boiling water, or with a blow-dryer, etc. Warming the HANDALL Jr. will make it easier to stretch. On steel frame firearms, make sure the sleeve is completely dry so the firearm is protected against rust.

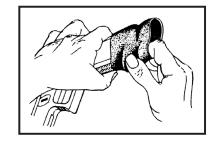

3. Next, pull the sleeve towards the front of the firearm until the finger groove ridge is over the front corner of the frame. The HANDALL Jr. is designed to fit tightly and much force may be required to complete this step. The sleeve should be stretched as evenly as possible. The rubber is very durable and tear resistant although care must be exercised not to gouge, cut, or pull excessively on the edges of the sleeve, as a tear may develop.

ATTENTION


This Hogue Grip Sleeve is designed to be used with standard automatic pistols. DO NOT INSTALL THIS SLEEVE on pistols with grip safeties or functions. FOR EXAMPLE: It should not be used on a Colt 1911 style pistol as it will disable the grip safety mechanism.

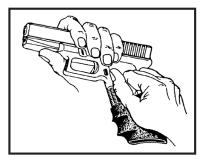

4. The grip must be pulled onto the firearm frame. Slip your fingers under the sleeve and grab the edge. Pull upwards onto the firearm. Do not pull outwards any more than necessary. Do this a little at a time alternating from right to left, back and forth, inside and out, whatever it takes until the grip is to its desired height.

5. The HAND*ALL* Jr. is designed to fit standard semi-auto pistols as shown. Raise or lower the sleeve to fit most comfortably in your hand.

6. The bottom edge of the HANDALL Jr. will fit flush or slightly above the bottom of large pocket pistols. The extra length will need to be trimmed off on very short pistols. Do this by simply trimming the bottom with a hobby knife. A thin piece of clear plastic from the package inserted between the firearm and sleeve will prevent scratching the firearm and will allow you to see where you are cutting.

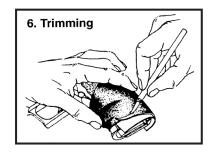



IMPORTANT!

Check all functions of your firearm after grips are installed. **Test-fire your firearm**. This is especially important if weapon is to be used for law enforcement duty.