

INSTALLATION PROCEDURE

MONOGRIP®

Ruger Blackhawk & Single Six

If you have any problems installing your new Hogue grip or have any questions about the installation procedure, please don't hesitate to give us a call. We will be glad to help make sure your grip fits perfectly!

HOGUE®


HOGUE, INC.

P.O. Box 91360
Henderson, NV 89009
1-800-438-4747


Hogueinc.com

IMPORTANT CONSUMER AND WARRANTY INFORMATION ON BACK OF PACKAGE

VARIOUS RUGER FRAME STYLES

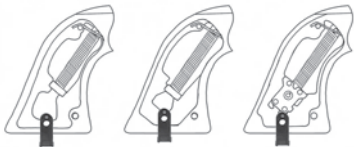

3. Place stirrup over frame and install pin as shown.

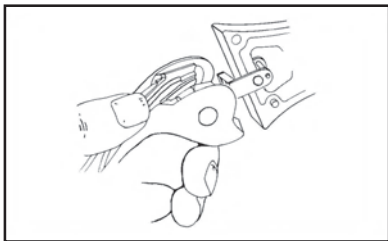

4. Start by placing the stirrup and frame pin into the internal grooves within the MONOGRIP. **Note:** You may need to pull the grip open in order to start the grip onto the frame.


A FEW WORDS ABOUT FIT AND FUNCTION

Firearm frame dimensions vary from firearm to firearm. No Hogue grip leaves our facility unless it fits and functions properly with our firearms first. Please keep this in mind.


It is imperative to check all functions of your firearm after the installation of your new Hogue grip. **Testfire the firearm before using it in the field.** This is especially important if the firearm is to be used for law enforcement duty.

If you do not feel competent to check the proper function of the firearm yourself, we suggest visiting your gunsmith to check this for you.


All of us at Hogue wish you many years of happy shooting with your new grip!

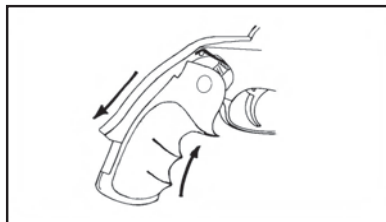


5. Continue to guide the MONOGRIP up behind the trigger guard, then using a radial motion, fully seat the grip onto the frame.

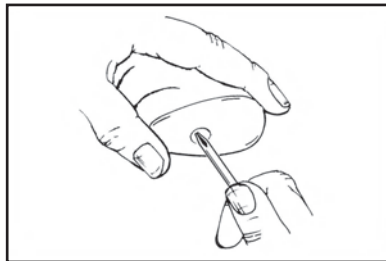

6. Using a small Phillips screwdriver or similar tool, insert through grip mounting hole and align the stirrup nut with the mounting hole.

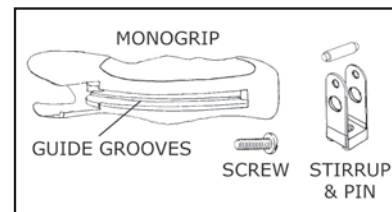


1. Before starting to work, **MAKE SURE YOUR FIREARM IS UNLOADED.** Remove the existing grip.

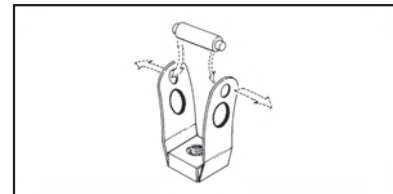


2. Spread stirrup and remove pin.

IMPORTANT!

Check all functions of your firearm after grips are installed. **Test-fire your firearm.** This is especially important if weapon is to be used for law enforcement duty.

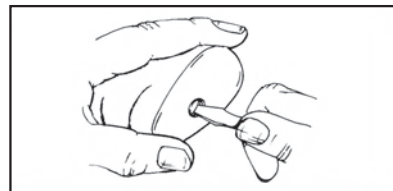

7. Insert mounting screw and tighten snugly. Use caution as not to cross-thread screw or over-tighten screw. Doing so will damage the screw and/or stirrup.

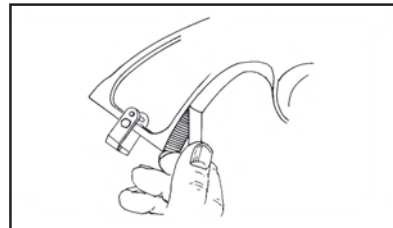

8. Your new MONOGRIP is designed to fit an average sized firearm frame. However, firearm frame dimensions vary from firearm to firearm. If necessary, your MONOGRIP can be adjusted to your frame. Simply remove the grip from the frame, then place small strips (shims) of tape onto the lower corner of the front strap and replace your grip. Repeat until your MONOGRIP is flush with the frame's backstrap.