

# MONOGRIP® ASSEMBLY INSTRUCTIONS

If you have any problems installing your **MONOGRIP** please call us at (805) 239-1440. We will be glad to help make sure your grip fits perfectly.

Please use these instructions as a general guide. Due to the large number of different firearm frame styles, your particular installation may be slightly different. Please look for any supplemental instructions that may be included in your package. **If you have any problems, do not hesitate to contact us.**

## A FEW WORDS ABOUT FIT


It is a fact that gun frame dimensions vary from firearm to firearm. No grip is shipped unless it fits and functions on our firearms properly. Please keep this in mind.

It is imperative to make sure that every firearm functions properly with after-market grips installed. Although the grip functions properly on our firearms, it is the user's responsibility to check all functions of a firearm after new grips are installed. This is especially important if the weapon is to be used for law enforcement duty. If you do not feel competent to check the proper function yourself, we suggest visiting your gunsmith to check this for you.

It is important to **test fire** the firearm before using in the field.

## SUPPLEMENTARY INSTRUCTIONS FOR RUBBER J-FRAME GRIPS

Prior to installing your new rubber J-Frame grip, it is necessary to replace your stock grip pin with the shorter pin supplied in this package. The original pin is too long and will not fit into your new grip (original pin can also be ground down to 14mm length.)

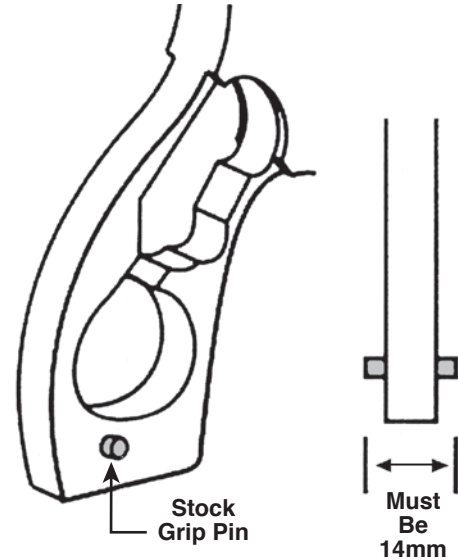


# HOGUE®

**HOGUE® INC.**  
P.O. BOX 91360  
HENDERSON, NV 89009  
1-800-438-4747  
Hogueinc.com

CRD\_INS\_R1\_12282015


## IMPORTANT CONSUMER AND WARRANTY INFORMATION ON BACK OF PACKAGE

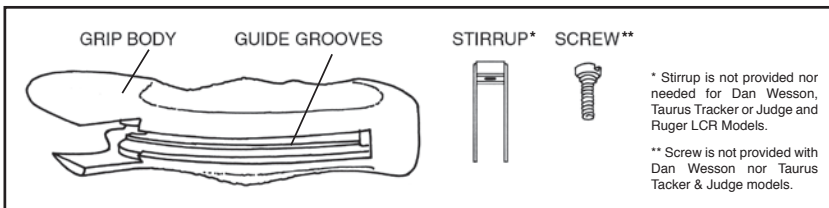

*If any parts are missing Hogue will supply them at no charge.*


**NOTE: Dan Wesson, Taurus Tracker or Judge and Ruger LCR Models do not require stirrup assembly.** Simply guide the firearm handle into the Monogrip and fully seat the frame. Insert the mounting screw through the bottom of the grip into the frame threads. Do not over tighten.

- 1** Before starting to work, **MAKE SURE THE FIREARM IS UNLOADED.** Remove existing grips.

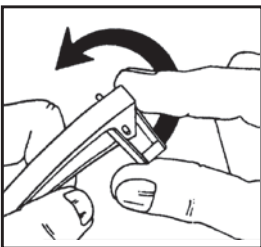


- 2** Place the stirrup over the bottom strap of the handle and rotate it until the hole in each side engages the stock pin.

**IMPORTANT!**  
Check all functions of your firearm after grips are installed.  
**Test fire your firearm.**

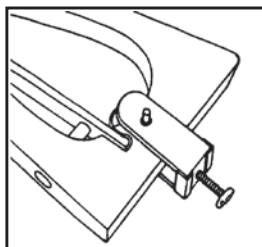


- 3** When in place, the stirrup is a clamp that provides a screw thread hanging below the handle for securing the **MONOGRIP®** to the frame. No alternation of the firearm frame is needed. Remove the screw from the stirrup.

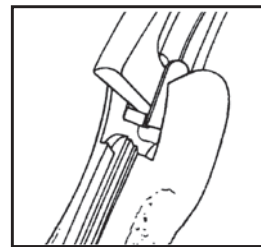


- 4** Mate the firearm handle and **MONOGRIP®** by first placing the stirrup and stock pin into the internal guide grooves using your thumb to spread the grip.



- 6** Insert the mounting screw through the hole on the bottom of the grip. Insert the screw so it enters the stirrup threads, and using an appropriate screwdriver, tighten the screw until snug, no tighter. Over-tightening does nothing to increase grip tightness and can damage the screw or stirrup.

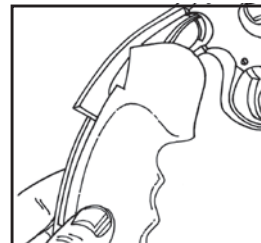

- 5** **MONOGRIP®** should be guided up behind the trigger guard, then pivoted to cover the frame straps. The grip must mate with the semi-circular loops at the top of the gun handle. **MONOGRIP®** must be fully seated on the frame before inserting mounting screw.

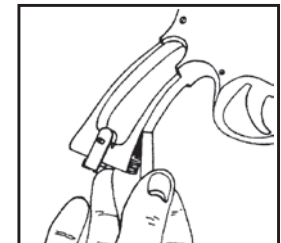

- 7** Your **MONOGRIP®** is designed to fit an average size firearm frame. However, frame dimensions do vary slightly from firearm to firearm. If necessary, your **MONOGRIP®** can be adjusted by placing small shim(s) of tape (as shown) on the lower corner of the front strap. Add or subtract tape until grip is flush with backstrap.